

KitchenAid®

MIXER

MODELS:


5KSM70SHXEAC0 (Almond Cream)

5KSM70SHXEER0 (Empire Red)

5KSM70SHXE0B0 (Onyx Black)

5KSM70SHXEPP0 (Pebbled Palm)


COLOR VARIATION PARTS

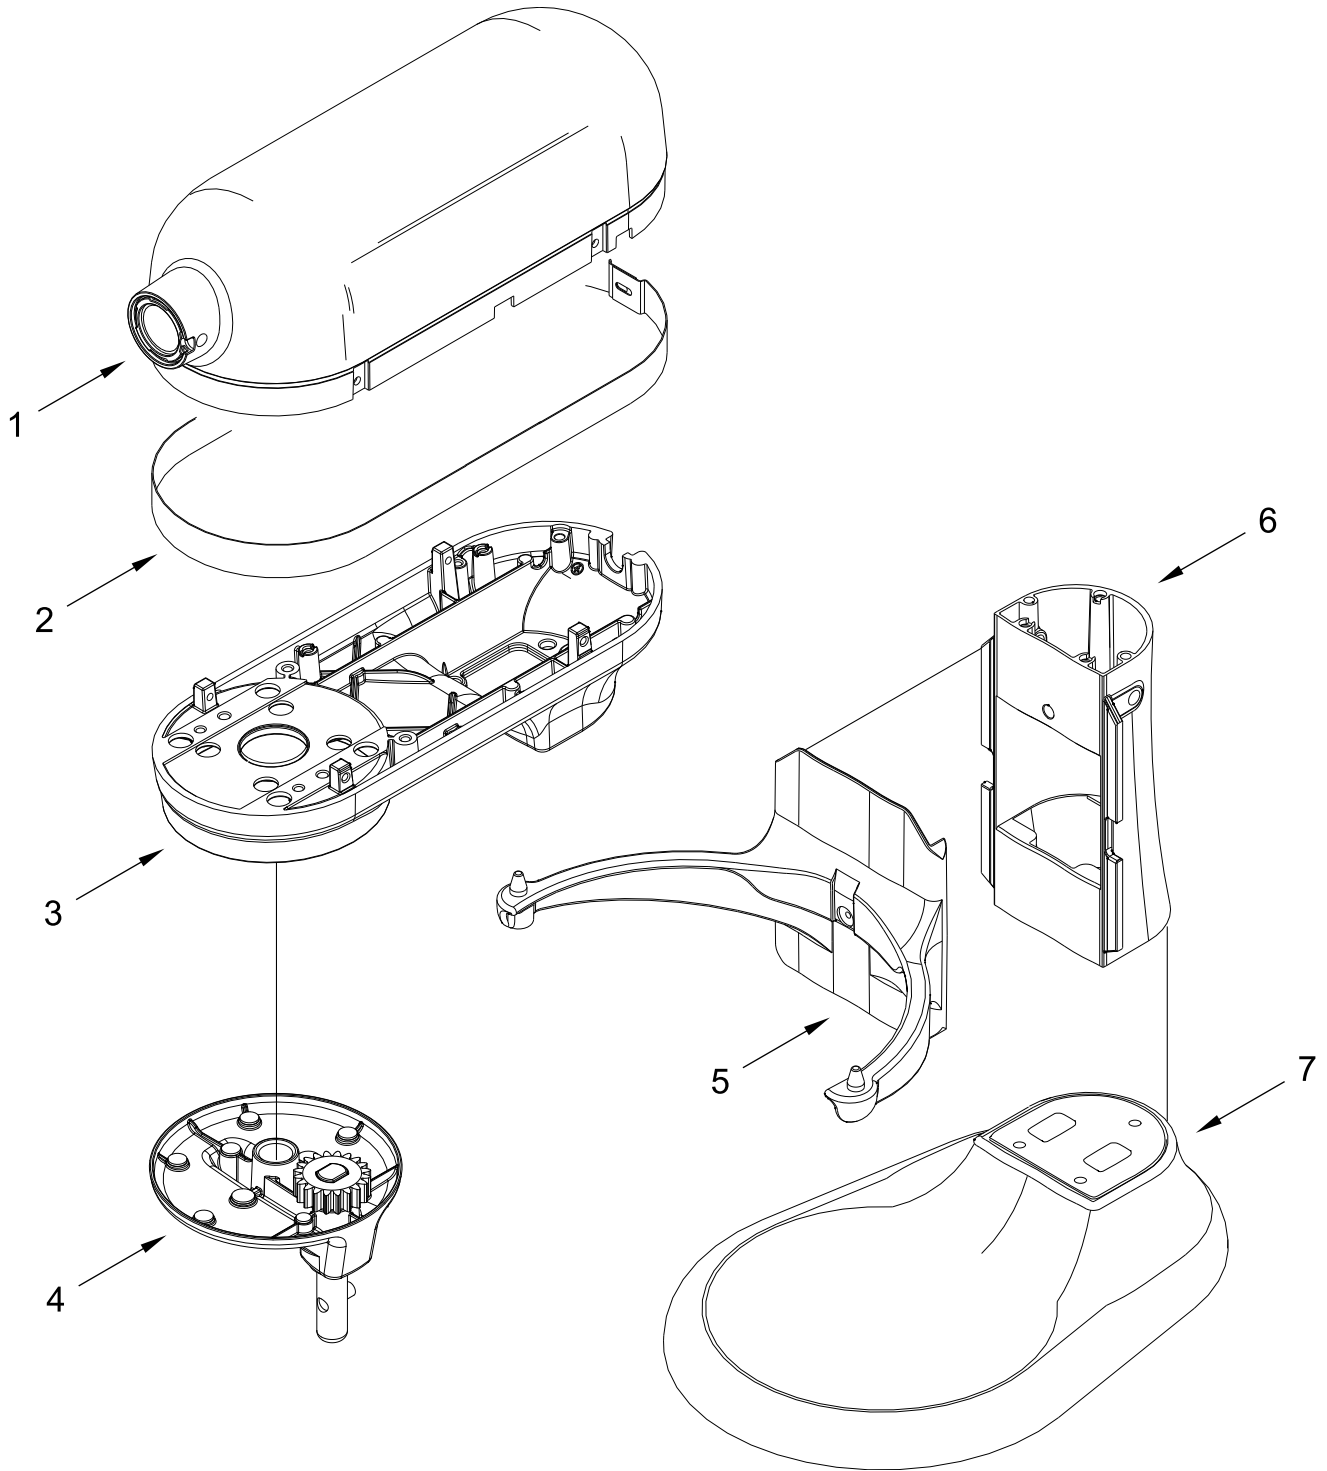

COLOR VARIATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Motor Housing	4		Planetary	7		Base and Foot Assembly
	9705298	Almond Creme		W11595416	Silent Silver			
	9705300	Empire Red	5		Bowl Support and Pins		9705346	Almond Creme
	9705296	Onyx Black		9705358	Almond Creme		9705348	Empire Red
	W11415369	Pebbled Palm		9705360	Empire Red		9705344	Onyx Black
2		Trim Band		9705356	Onyx Black		W11415375	Pebbled Palm
	W11420352	Bright Aluminum		W11415373	Pebbled Palm			
3		Lower Gearcase	6		Column and Pins			
	W11527636	Almond Cream		9705322	Almond Creme			
	W11520142	Empire Red		9705324	Empire Red			
	W11421149	Onyx Black		9705320	Onyx Black			
	W11520128	Pebbled Palm		W11415374	Pebbled Palm			


CASE, GEARING AND PLANETARY UNIT

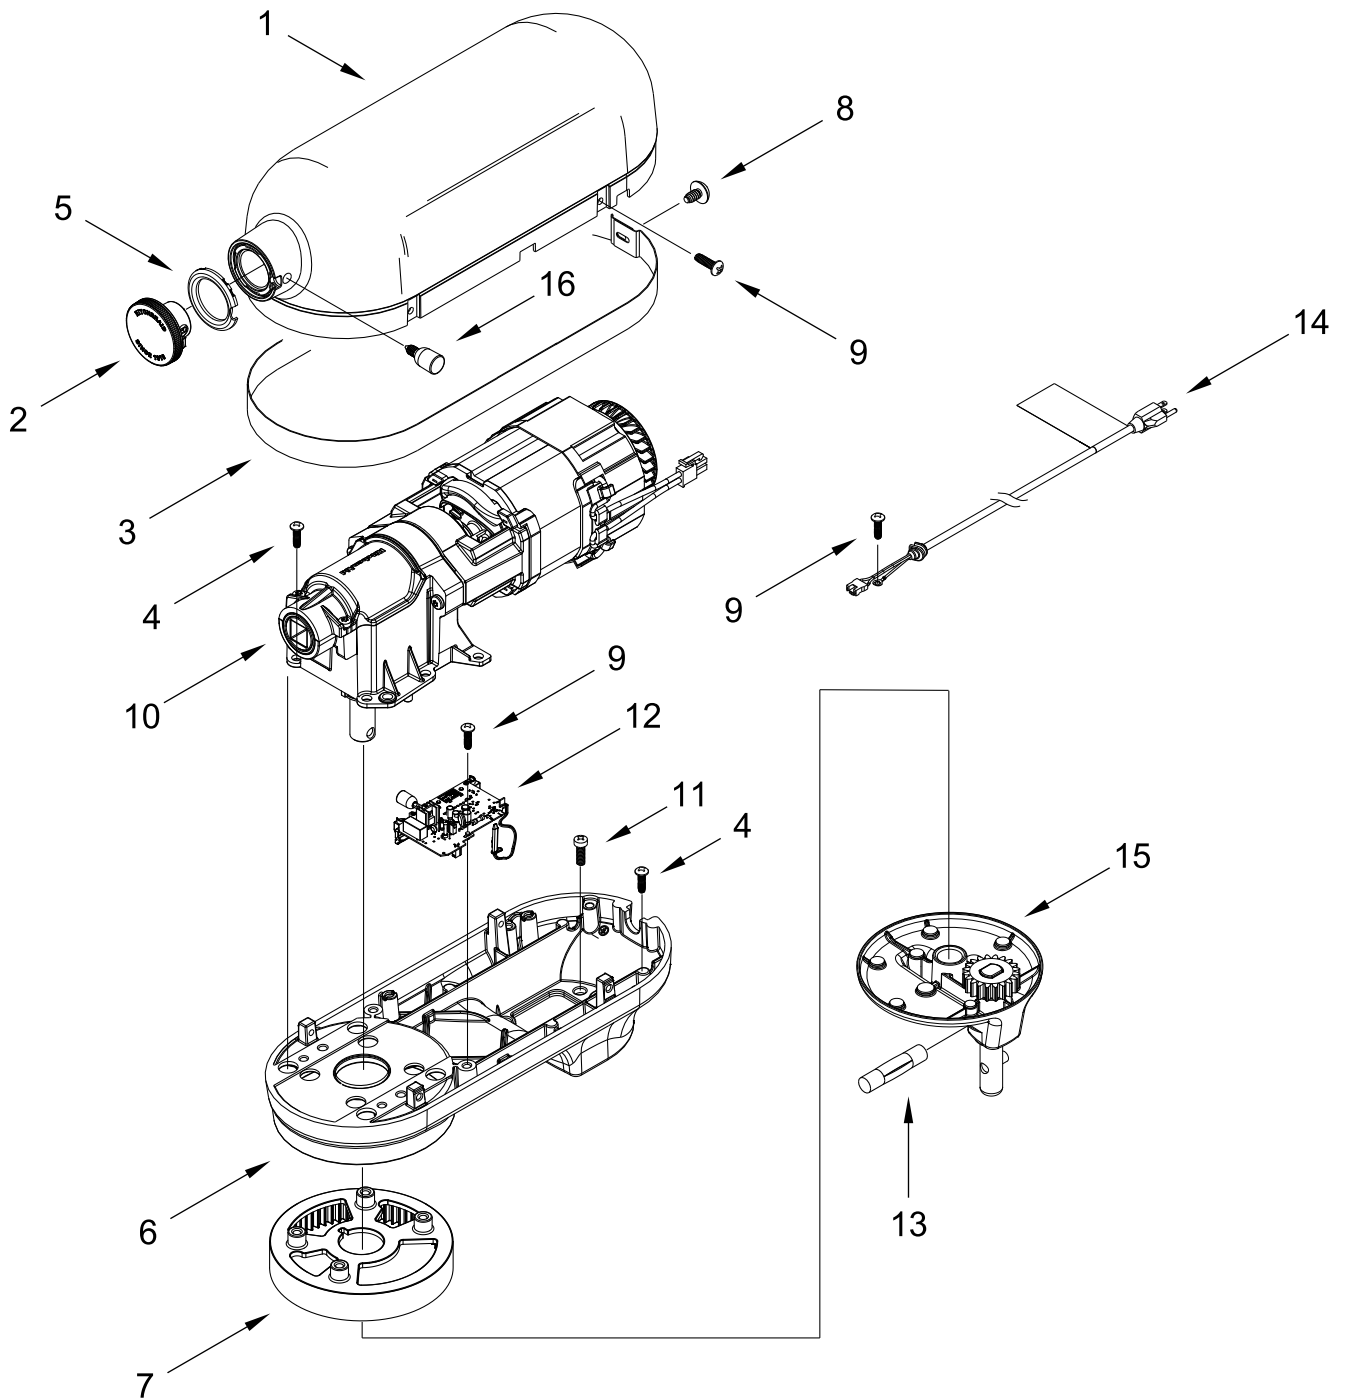

CASE, GEARING AND PLANETARY UNIT

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Gearcase Motor Housing (Refer to Color Variation Parts Page)	6		Lower Gearcase (Refer to Color Variation Parts Page)	12	W11512563	Control Assembly, 230 Volt
2	W11591898	Cover, Attachment Hub	7	W11454895	Gear, Ring and Plate Assembly	13	W10234531	Pin, Groove
3		Band, Trim (Refer to Color Variation Parts Page)	8	3400617	Screw	14		Cord, Power
4	W10351843	Screw	9	3400814	Screw	15	W11459270	Black Planetary Assembly (Refer to Color Variation Parts Page)
5	9706141	Ring, Attachment Hub	10	W11480076	Motor, 230 Volt Assembly	16		Thumb Screw
			11	3400200	Screw		W11521863	Chrome

BASE AND PEDESTAL UNIT

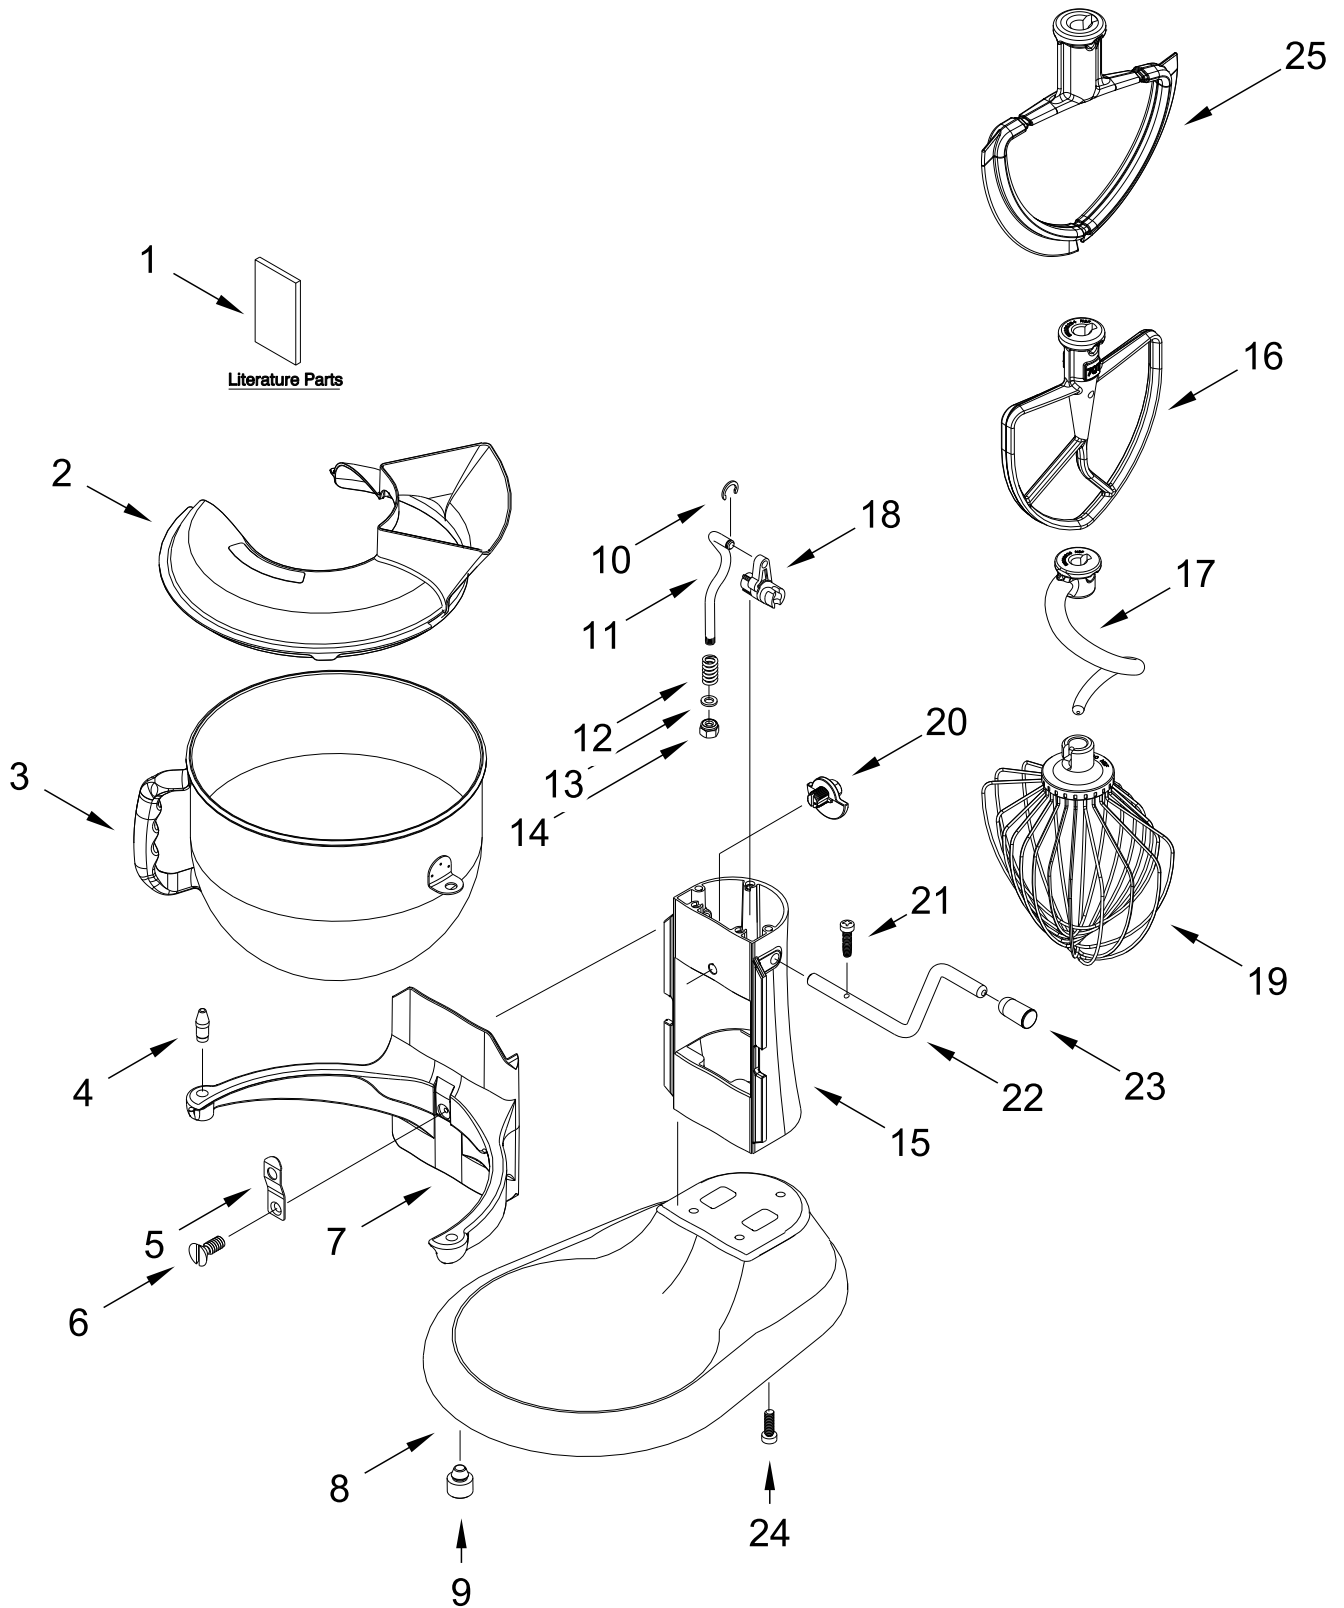

BASE AND PEDESTAL UNIT

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8		Base and Foot Assembly	16	W10720793	Beater, Flat (Stainless)
	W11519610	Use and Care Guide				17	W10720794	Hook, Dough (Stainless)
2	W11385624	Shield, Pouring (Wide)			(Refer to Color Variation Parts Page)	18	9706885	Arm, Bowl Lift
3	W11512549	Bowl, 7 Qt. (Brushed)	9	9708649	Foot	19	W10600940	Whip, Wire
4	240185	Pin, Retaining Bowl	10	9703307	Ring, Retaining	20	9703426	Cam, Adjusting
5	W10504114	Clip, Bowl Retainer	11	W11376364	Rod, Bowl Lift	21	3400863	Screw
6	3400018	Screw	12	9237	Spring, Lift Rod	22	W11376371	Handle, Bowl Lift
7		Bowl Support	13	9703439	Washer	23	W11627641	Cap, Handle
		(Refer to Color Variation Parts Page)	14	8533907	Nut	24	3400200	Screw
			15		Column Assembly	25	W11569891	Beater, Double Flex Edge
					(Refer to Color Variation Parts Page)			